



Nokia 2128i LCD Screen Replacement

This guide will show you how to replace your LCD Screen.

Written By: Andres Echeverria





TOOLS:


- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Faceplate




- Insert the plastic opening tool under the faceplate.
- Separate the faceplate from main body by twisting the prying tool with some force.
- The faceplate is held by three plastic fasteners, so pry evenly on both sides of phone.

Step 2 — Keypad

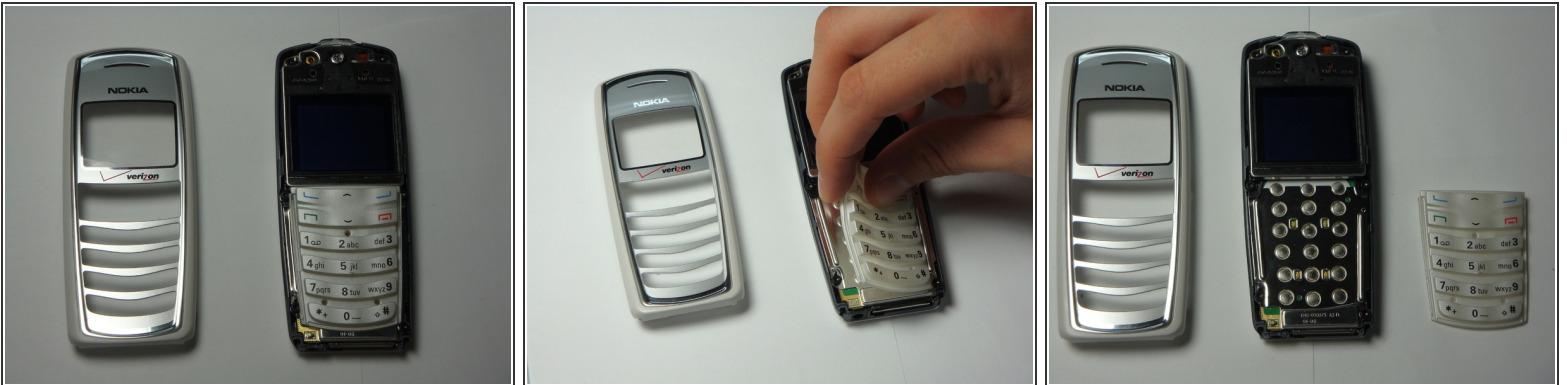


- With the faceplate removed, simply peel off rubber key pad and remove.

Step 3 — Motherboard Assembly

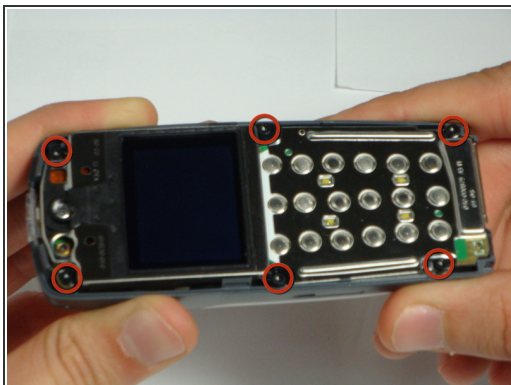

- Locate and remove the six screws on the front of the phone using a T6 Torx.
- All 6 screws are 6.9mm long.

Step 4

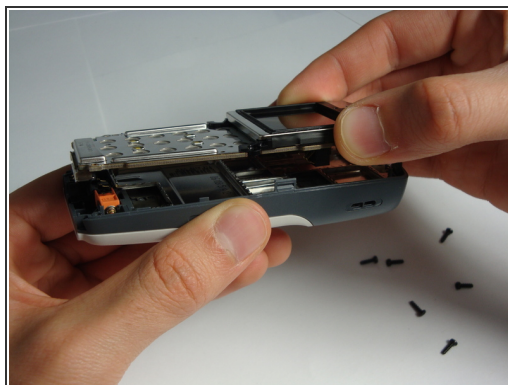

- After removing screws, lift the motherboard assembly straight off the cell phone body.

Step 5 — Battery




- Be sure cell phone is off before you begin to disassemble the phone.
- Press the button on the bottom of the back of the cell phone.
- Slide rear panel down and remove it.

Step 6



- Using your fingernail, pry the back of the battery upwards and pull out.

Step 7 — Speaker

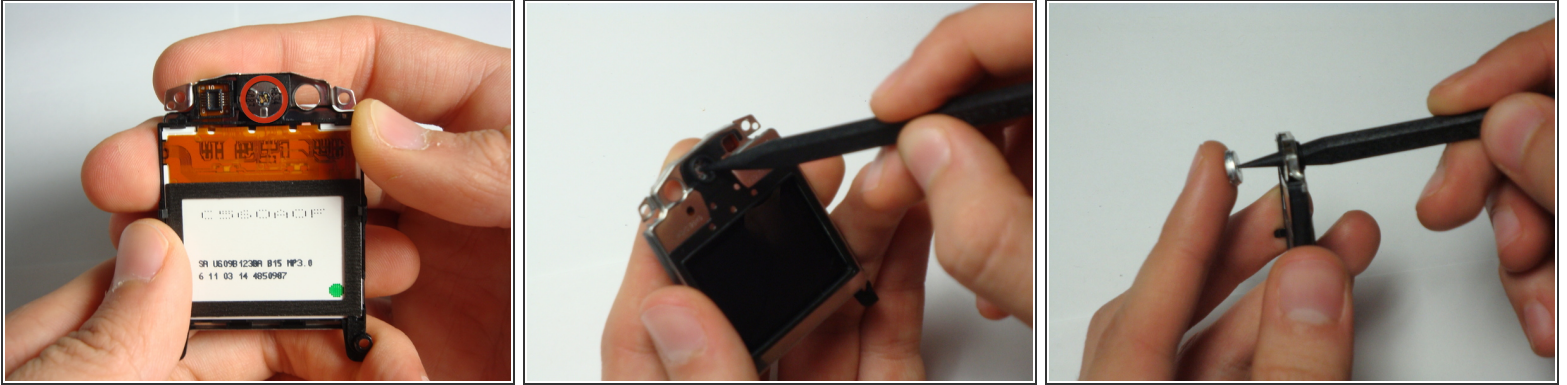

- With the LCD unit removed, gently press out the speaker with a non-metallic pointed object.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:20:15 AM.